



ATOMIC PC

**OPERAZIONE
REGOLABILE**



SUPPORTO TECNICO

Scrivi a: info@atomic-accessories.com

TECHNICAL SUPPORT

Please contact: info@atomic-accessories.com

supporte technique

Contacte: info@atomic-accessories.com



atomic-accessories.com



This product is not sponsored, endorsed or approved by Microsoft®.

STEALTHSTICK™

JOYSTICK USB

Manuale di istruzioni
Instruction Manual

STEALTHSTICK

JOYSTICK USB

System Demand:

1. Use for computer with USB™ port
2. Compatible with PC WINDOWS® 98SE/ME/2000/ XP/VISTA
3. Support DIRECX7.0 or above
4. CD-ROM player
5. 64MB RAM Memory

Characteristics of joystick STEALTHSTICK Atomic:

1. 8 direction, 7 fire buttons.
2. Vibration support and high compatibility with flying game.
3. Switch on/off for the vibration function.
4. Easy operated just plug and play.
5. Ergonomic and comfort handle.
6. Throttle adjustment at different intensity.




Software installation:

1. Insert driver disk to CD-ROM player.
2. Connect your joystick plug STEALTHSTICK Atomic to USB™ port, click my computer and install file "SETUP", system automatically detect device, follow the on-screen instruction to install.
3. After installation you can explore the sky whit STEALTHSTICK Atomic!

Test control:

1. Connect your joystick plug STEALTHSTICK Atomic to USB™ port, click CONTROL PANEL> GAME CONTROLLERS, the joystick will be visualized "USB all-in-one game controller" click PROPERTIES:

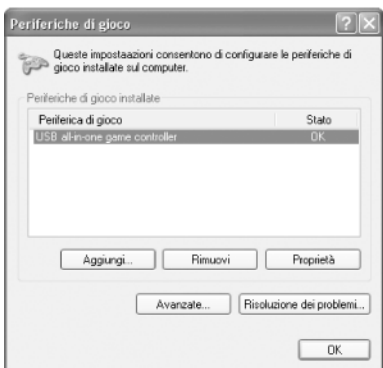

2. Window TEST has the function of testing button and throttle adjustment, included test of directional pad. In the right part of window there is a SENSITIVITY

adjustment of joystick.

Note: Button n.8 is unavailable for eventually future upgrade of technical features.

3. KEY MAP can exchange the button function. OPERATION: move slider click SET on the screen, then press the button which you want to change. Then there have change show on the second row number which on screen. After setting, TEST window can test the function, and save setting with SAVE, is also possible import setting through LOAD.

NOTE: this function is not workable with O.S. Windows Vista™.*

Note: Button n.8 is unavailable for eventually future upgrade of technical features.

4. KEY BOARD MAP window can exchange button functions on keyboard for the button on joypad. OPERATION: click SET and press any KEYBOARD button which you like. After setting, TEST window can test the function, and save setting with SAVE, is also possible import setting through LOAD.


NOTE: this function is not workable with O.S. Windows Vista™.*

Note: Button n.8 is unavailable for eventually future upgrade of technical features.

5. VIBRATION window is test for vibration adjustment, PERIOD adjust vibration frequency time. MAG is vibration extent adjust, cooperate frequency's change and deal with vibration signal perfect. The follow LEFT button is to testing the motor vibration effect.

Note: RIGHT button vibration is unavailable for eventually future upgrade of technical features.

6. ADJUSTMENT adjusts middle point and border situation on column of joystick STEALTHSTICK according to operation instruction on the screen.

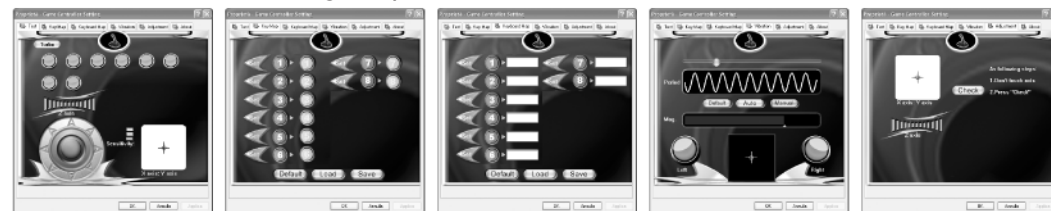

7. Click FINISH then you can start to operate game after function being setting.

Caution:

1. This product required USB™ device.
2. Check if game support vibration function.
3. Don' t use and keep the product under the humidity or high temperature.
4. Don' t damage and don' t strip down joystick.

Technical support:

Write to: info@atomic-accessories.com

* Please visit our Web Site to check and download eventually new drivers

[ATOMIC-ACCESSORIES.COM](http://atomic-accessories.com)

ATOMIC
ACCESSORIES