



XCEED

Joypad digitale USB 8 pulsanti

PRO PAD

Thank you for purchasing the XCEED PRO PAD ATOMIC. This game pad is supported by the Windows versions 98se®/ME®/2000®/XP®. Before starting operation, read this manual carefully in order to familiarize yourself with the functions of your game pad.

Product Feature:

- Compatible with Windows 98se®/ME®/2000®/XP®
- 8 fire buttons
- Digital directional pad at 8 ways
- Turbo/Clear extra function

Installation:

1. Plug the USB cable of your game pad to the USB plug of your computer. Windows will eventually ask you to insert the Windows 98se®/ME®/2000®/XP® in order to install the new device.
2. Click on Start "Settings/Control panel/Game controller to configure your game pad XCEED PRO PAD ATOMIC™.
3. Select the device name presents on the panel.
4. Click on "Properties". In this panel you are able to test and calibrate all functions of the game pad.

Care and services:

- Do not store the unit in direct sunlight or in extreme temperatures. As this may damage the components.
- Do not disassemble the unit.
- Clean your game pad from time to time with a damp cloth.
- Do not use abrasive cleaners of any type and do not spill any liquid cleaners directly on your game pad. Any fluid seaks inside the joystick may cause unexpected damages.

Import Notes:

Not every game requires all functioning become 8 buttons in total, on your Smart Pad. If some buttons do not work while playing a game please check line game settings again. The function of the game pad buttons may vary in different games. Before proceeding game settings from the "Options" menu always read your game's manual carefully to approach the best game settings. Make sure your software supports the game controller. The function of the game pad buttons may vary in different games. Before proceeding game settings from the "Options" menu always read your game's manual carefully to approach the best game settings.



This is not a game. Not suitable for person under 8. ATOMIC ACCESSORIES and its logo are registered trademarks. All trademarks and logos are the property of their respective owner. This product is not sponsored, endorsed or approved by Microsoft™.