 





1 PRODUCT LAYOUT

1.1 Universal remote function description

TV	PS2	AUX	VCR
TV			
	PS2		
		AUX	VCR
1	1	1	1
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0/10	0/10	0	0
11,100/Enter	CLEAR	11,100/Enter	11,100/Enter
12/Recall	TIME	12/Recall	12/Recall
Power	 Reset	Power	Power
CH+	R3	CH+	CH+
CH-	R2	CH-	CH-
TV/VCR	SELECT	TV/VCR	TV/VCR
CATV	STAR	--	--
VOL+	L3	VOL+	--
VOL-	L2	VOL-	--
Mute	SUBTITLE	Mute	Mute
Menu	MENU	Menu	--
Timer	TIME	Timer	Timer
MTS	ANGLE	--	--
Audio	AUDIO	--	--
Video	TOP MENU	--	--
Up	UP	--	--
Down	DOWN	--	--
Right	RIGHT	--	--
Left	LEFT	--	--
Reset	SHUFFLE	Reset	
Display	PROGRAM		Display
--	RETURN	 Record	 Record

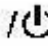 

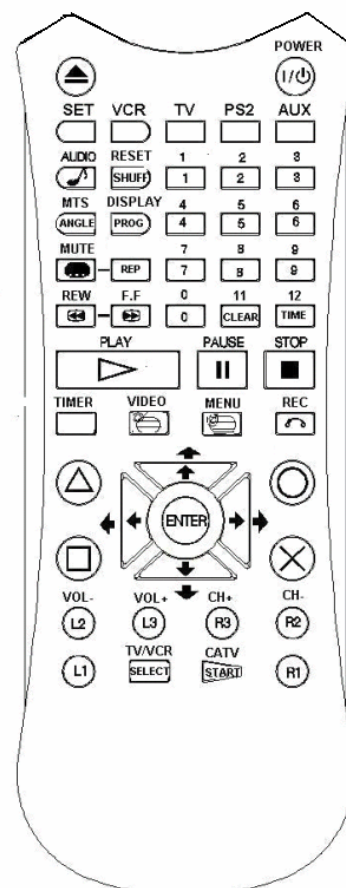--	◀◀	◀◀	◀◀
--	▶	▶	▶
--	▶▶	▶▶	▶▶
--	■	■	■
--			
--	⏮	--	--
--	⏪	--	--
--	⏩	--	--
--	⏭	--	--
--	⏮	--	--
--	ENTER	--	--
--	L1	--	--
--	R1	--	--
--	REPEAT	--	--
SET			

1.2 Universal remote receiver

1.2.1 It has transmission LED , when you use remote controller ,the LED of the receiver will flash.

2. Features

- 2.1. Operating 4 Four devices(TV, VCR, SONY PlayStation® 2 games console , AUX(CD/VCD/LD/DVD/AIRCONDITIONER)
- 2.2. Operate voltage 2.4~3.4v
- 2.3. Standby current < 50uA
- 2.4. Operating current < 28mA
- 2.5. Operate voltage 2.4~3.4v
- 2.6. Use 2 AAA batteries .
- 2.7. Operating distance: ≥ 7m
- 2.8. Transmission Indicator LED
- 2.9. Operating mode: Set Up mode, Quick Search mode, Display mode
- 2.10. Operating angle of approx 45degrees

3. Product Overview

3.1 The Universal remote is designed on a standard conception, with ergonomic

features.

3.2 Universal remote will support your PlayStation® 2 DVD function. TV \VCR and AUX.

3.3 Universal Remote is the remote to full support Sony's new SCPH-5000 series and SCPH-70000 PlayStation® 2 hardware. When using the Universal Remote with this new model ,there is no need to use the receiver. Just point and press and you will be off and running. Only the new SCPH-50000 series will allow you to open the CD tray. And all can power off your PlayStation® 2 with the remote .instead of getting up and pressing the button on the PlayStation® 2.

4. Instructions

4.1 For PlayStation® 2

4.1.1 make sure your PlayStation® 2 is turn off .

4.1.2 Plug your universal Remote Receiver into controller port two ,you can also plug the Receiver into controller port one if you choose but pelican recommends you use controller port two.

4.1.3 Insert batteries into your Universal remote. Make sure to check the battery compartment and insert the batteries correctly. The remote require 2AAA batteries ,not included.

4.1.4 Insert a DVD movie to your PlayStation® 2.

4.1.5 Turn on your PlayStation® 2.

4.1.6 Enjoy your movie.

4.2 For PlayStation® 2 (SCPH-50000&SCPH-70000)

4.2.1 Make sure your PlayStation® 2 is turn off .

4.2.2 Insert batteries into your Universal remote. Make sure to check the battery compartment and insert the batteries correctly. The remote require 2AAA batteries ,not included.

4.2.3. Insert a DVD movie to your PlayStation® 2.

4.2.4. Turn on your PlayStation® 2.

4.2.5 . Enjoy your movie.

Note: the SCPH-50000 and SCPH-70000 comes equipped

with in IR sensor allowing you to use compatible remote

with it without the use of a receiver .

4.3 For the Pass-Through port:

4.3.1 Make sure you PlayStation® 2 is turn off .

4.3.2 Make sure the universal Remotes Receiver is plugged into the controller port your want to use .

4.3.3 Plug the desired controller into the Pass-Through port .

4.3.4 Insert a game into your PlayStation® 2.

4.3.5 Turn on your PlayStation® 2

4.3.6 Enjoy the movie.

5. For Universal Operation

5.1. When use with Sony's new SCPH-5000 series and SCPH-70000 PlayStation® 2 hardware, It needn't inside a receivers, otherwise must be inside one.

5.2. If use with other device such as TV VCR and AUX ,it must fine out the code of brand name from the attach CODE LIST . Find the correct code and enter in .then press the device key and can controller it .

5.3. SET UP

5.3.1 Following the attached CODE LIST to find out the code of the brand name, model number and code number. The setup procedure as the following:

5.3.2 Press and hold the [SET] key then press the selected DEVICE key, such as TV/VCR or AUX


5.3.3 The LED lights up. Release both keys.

5.3.4 Following the sequence to input the code numbers (three digits).

5.3.5 After inputting the 3 digit code number, the LED will be turned off if the code number is correct. If the code number is not in the list, the LED will flash twice and remain in the setup status, please go back to step <5.3.3>.

5.3.6 Setup is finished.

Please note: To leave the Setup mode at any time, please press the DEVICE key (System will leave the Setup mode automatically after no keys have been pressed for 10 seconds).

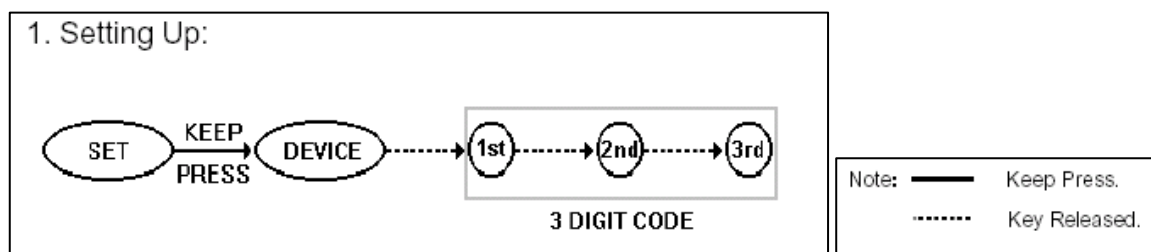

5.4 QUICK SEARCH

5.4.1 If you still can't control the device after completing the setup procedure, or if you can't find the code number from code list, you can use this feature to find a suitable control code. Enter the SEARCH mode and set to FORWARD SEARCH. Within the SEARCH procedure you can use the [SET] key to change SEARCH direction or FORWARD / BACKWARD to inter-change.

5.4.2. Power on the selected device or VCR/CD/LD/VCD/DVD and insert TAPE/DISK.

 
5.4.3. Press and hold the [SET] key then press the selected DEVICE key, e.g. [TV] or [VCR] or [AUX].

5.4.4. When the LED lights up, release both keys.

5.4.5 Press the [SET] key once again to entry the QUICK SEARCH MODE and the

LED will flash.

- 5.4.6. Aim the Remote Control your device, press and release the [POWER] key slowly, It will send the [POWER] Signal of next Table, (Press [POWER] or [PLAY] key for VCR/AUX Device). Check whether the device has been activated or not (POWER OFF or PLAY). Go to procedure <5.4.3> if activated or repeat procedure <5.4.3> if not .
- 5.4.7 If at any time you want to leave the SEARCH MODE, please press the [DEVICE] key and the LED will be turned off.
- 5.4.8 Check that the other keys, e.g. [CH+/-],[VOL+/-]...etc., can be controlled or not. If they can't be controlled, please return to procedure <A>.
- 5.4.9 Some of the devices may have a slow response in the [POWER] signal, at the SEARCH mode you can use the [SET] key as a FORWARD/BACKWARD toggle switching to change the SEARCH direction. This may find the suitable control code faster. The procedure is: press [SET] key during the QUICK SEARCH MODE. At the same time, SEARCH direction will change to reverse direction (FORWARD change to BACKWARD or BACKWARD change to FORWARD).

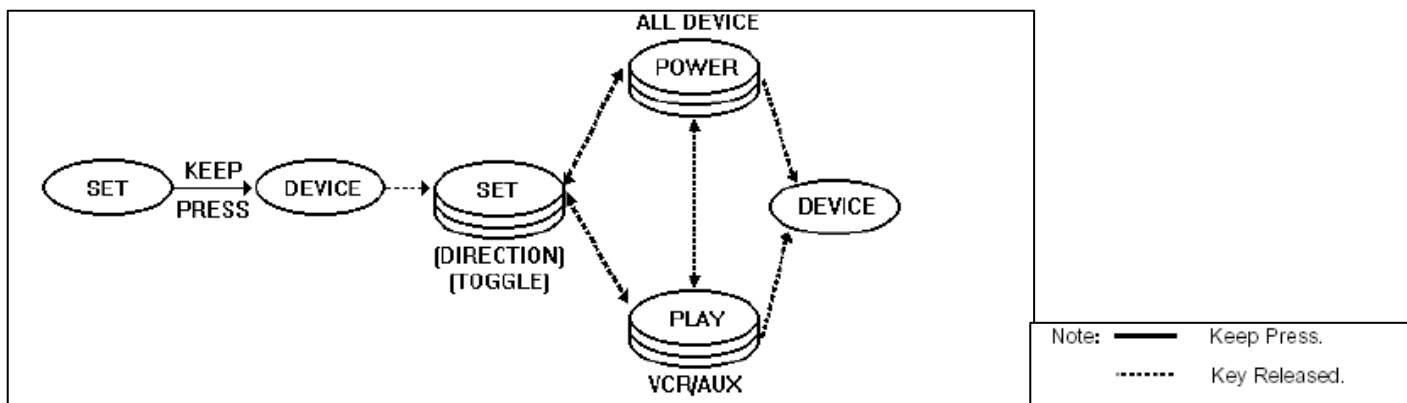

Remark: During the SEARCH MODE status, other than [POWER] key (VCR/AUX is [POWER] & [PLAY] key) all the keys can operated normally. You can check the other keys from within the SEARCH MODE without leaving the function. (System will leave the Search mode automatically if no key has been pressed for 30 sec).

5.5. BRAND CODE DISPLAY

- 5.5.1. There are three digits for each brand code, and any one of digits may be shown.
- 5.5.2. Press and hold the [SET] key then press the selected digit, e.g.1 or 2 or 3.
- 5.5.3. Release both keys.
- 5.5.4. The number of LED flashing times is the control code of the selected digit

