 




VERSION 2.1 DVD REMOTE CONTROL

 
The remote control for all Playstation2® models

INSTRUCTION MANUAL

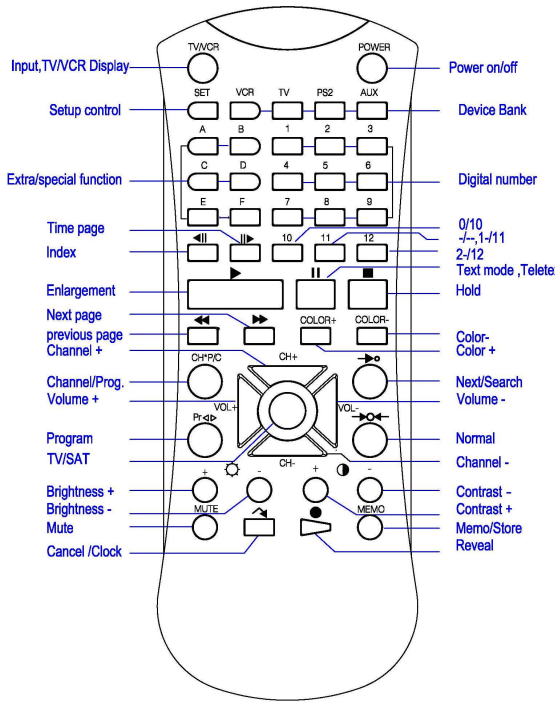

TV functions description

Note:1. A,B,C,D,E,F are special function keys, These keys' function may be different in many devices.

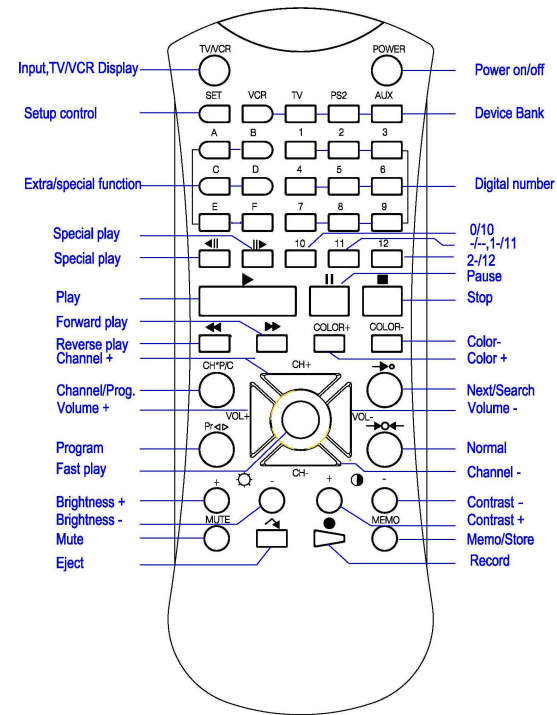

VCR/AUX functions description

Note:1. A,B,C,D,E,F are special function keys, These keys' function may be different in many devices.

PS2 functions description

Product features

- Operating 4 Four devices (TV, VCR, SONY PlayStation® 2 games console, AUX(CD/VCD/LD/DVD/AIRCONDITIONER)
- Operate voltage: 2.4~3.4v
- Standby current: <50uA
- Operating current: <32mA
- Operate voltage 2.4~3.4v
- Use 2 AAA batteries.
- Operating distance: 7m
- Transmission Indicator LED
- Operating mode: Set Up mode, Quick Search mode, Display mode
- Operating angle of approx 45 degrees

Product Overview

- REMOTE CONTROL DVD UNIVERSAL ATOMIC is designed on a standard conception, with ergonomic features.
 - REMOTE CONTROL DVD UNIVERSAL is the remote to full support Sony's new SCPH-5000 series and SCPH-70000 PlayStation®2 hardware. When using the Universal Remote with this new model, there is no need to use the receiver. Just point and press and you will be off and running. Only the new SCPH-50000 series will allow you to open the CD tray. And all can power off your PlayStation®2 with the remote instead of getting up and pressing the button on the PlayStation®2.

Instructions

- PlayStation® 2 -
- make sure your PlayStation®2 is turn off .
- Plug your universal Remote Receiver into controller port two, you can also plug the Receiver into controller port one if you choose but Atomic recommends you use controller port two.
- Insert batteries into your Universal remote. Make sure to check the battery compartment and insert the batteries correctly. The remote require 2 AAA batteries, not included.
- Insert a DVD movie to your PlayStation®2.
- Turn on your PlayStation®2 & enjoy your movie!
- PlayStation®2 (SCPH-50000 & SCPH-70000) -
- Make sure your PlayStation®2 is turn off .
- Insert batteries into your Universal remote. Make sure to check the battery compartment and insert the batteries correctly. The remote require 2 AAA batteries, not included.
- Insert a DVD movie to your PlayStation®2.
- Turn on your PlayStation®2 & enjoy your movie!

 
Note: the SCPH-50000 and SCPH-70000 comes equipped with IR sensor allowing you to use compatible remote with it without the use of a receiver.

- For the Pass-Through port-
- Make sure you PlayStation®2 is turn off .
- Make sure the universal Remotes Receiver is plugged into the controller port your want to use.
- Plug the desired controller into the Pass-Through port .

- Insert a game into your PlayStation®2.
- Turn on your PlayStation®2 & enjoy the movie!
- For universal operations -
- When use with Sony's new SCPH-5000 series and SCPH-70000 PlayStation®2 hardware, it needn't inside a receivers, otherwise must be inside one.
- If use with other device such as TV VCR and AUX ,it must fine out the code of brand name from the attach CODE LIST. Find the correct code and enter in .then press the device key and can controller it.


- Set up -
- Following the attached CODE LIST to find out the code of the brand name, model number and code number. The setup procedure as the following:
- Press and hold the [SET] key then press the selected DEVICE key, such as TV/VCR or AUX
- The LED lights up. Release both keys.
- Following the sequence to input code numbers (three digits).
- After inputting the 3 digit code number, the LED will be turned off if the code number is correct. If the code number is not in the list, the LED will flash twice and remain in the setup status, please re-start the "Set up".
- Setup is finished.

Please note: to leave the Setup mode at any time, please press the DEVICE key (System will leave the Setup mode automatically after no keys have been pressed for 10 seconds).



- Quick search -
- If you still can't control the device after completing the setup procedure, or if you can't find the code number from code list, you can use this feature to find a suitable control code. Enter the SEARCH mode and set to FORWARD SEARCH. Within the SEARCH procedure you can use the [SET] key to change SEARCH direction or FORWARD/BACKWARD to inter-change.
- Power on the selected device or VCR/CD/LD/VCD/DVD and insert TAPE/DISK.
- Press and hold the [SET] key then press the selected DEVICE key, e.g. [TV] or [VCR] or [AUX].
- When the LED lights up, release both keys.
- Press the [SET] key once again to entry the QUICK SEARCH MODE and the LED will flash.
- Aim the Remote Control your device, press and release the [POWER] key slowly, It will send the [POWER] Signal of next Table. (Press [POWER] or [PLAY] key for VCR/AUX Device). Check whether the device has been activated or not (POWER OFF or PLAY).

 - If at any time you want to leave the SEARCH MODE, please press the [DEVICE] key and the LED will be turned off.
- Check that the other keys, e.g. [CH+/-],[VOL+/-]...etc., can be controlled or not. If they can't be controlled, please return to the start.
- Some of the devices may have a slow response in the [POWER] signal, at the SEARCH mode you can use the [SET] key as a FORWARD/BACKWARD toggle switching to change the SEARCH direction. This may find the suitable control code faster. The procedure is: press [SET] key during the QUICK SEARCH MODE. At the same time, SEARCH direction will change to reverse direction (FORWARD change to BACKWARD or BACKWARD change to FORWARD).

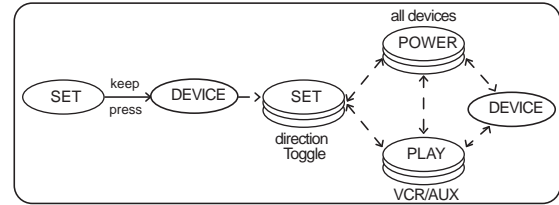

Remark: During the SEARCH MODE status, other than [POWER] key (VCR/AUX is [POWER] & [PLAY] key) all the keys can operated normally. You can check the other keys from within the SEARCH MODE without leaving the function. (System will leave the Search mode automatically if no key has been pressed for 30 sec).

BRAND CODE DISPLAY

- There are three digits for each brand code, and any one of digits may be shown. Press and hold the [SET] key then press the selected digit, e.g.1 or 2 or 3.
- Release both keys.
- The number of LED flashing times is the control code of the selected digit.

BRAND CODE LIST

You will be able to download in every moment the codes list about every device from www.atomic-accessories.com. Info-line: info@atomic-accessories.com.

PLEASE NOTE: Will be available codes for the greater device presents on the market. Is possible that codes for a particular device do not exist.



CX1120 Code List

Brand/Device	TV/TXT	VCR	SAT/DSS	CABLE	HIFI	CD	LD/VCD/DVD	AUX
AB			812					
ABC				452				
ACE	713							
Admiral	032,155							
AEON				502				
Aiwa	261					581	626	
Akai	005,159,169	269,270,271,309 310,356,357						
Alba			407					
Albiral	001							
Alfa Gold			810,811					
AlphaStar			826					
Amstar			847					
Amstrad	006		371,372,408 488					
Anitsch		311						
Ankaro			373					
APEX							672	
APO				516				
Apollo			402					
ASA	007,009,013,032 094,155,161	282						
Asiagiant				501,513				
Astra			372,409,488					
ASTRX			840,842,843 846					
ATLE						579		
ATLM							671	
Audiosonic	160							
Aura			430,487					
Ausind	008							
Autovox	004,007,012,014 015,078,079,104 153							
AWA	033,159,160,189 220							
Baird	162	271,273						
Barcom			373					
Basic Line	163							
BEKO	170,226							
Benjamin			468					
BEST			453	498				
Blaupunkt	010,017,018,020 054,231,232,233 234,236,241	272,274,275,312 369			568			569(VHS)
BPL	026,160,162,163							
Brionvega	104,155,164,165 200,201,257	276,283						
Bruns	158							
BSR	016,019,021,253							

CX1120 Code List

Brand/Device	TV/TXT	VCR	SAT/DSS	CABLE	HIFI	CD	LD/VCD/DVD	AUX
Bush(UK)	022	281	402					
Cabletime	246,247,251							524,525 526(CTV)
Cambridge			375					
CANAL+			804					
Caravell							622	
Century	145,146,155							
CGE	019,023,024,145 151,169,170,231	270,277						
CGM	093	291						
Chaparral	216		216,374,410					
Clarivox	001,166,167							
CONIC							673	
Contec	033,253							
Crosley	024,025,145,155 231							
CTC Clatronic	096							
Daewoo	168,209						660	
Dansai		281						
DCS							642	
Decca(UK)	002,004,026,028 031,258	278						
Denca							665	
Denon						547		564(TUNE) 566(DECK)
DNT			409,428,430 487					
Drake			376,445,446 447,495					
Dual	255,258	273,279						
Dual-Tec	004,011,019,029							
Dumont	155							
Dynasat			491,492					
Eastern				507,508 509,510				
Echostar			377,378,379 386,409,411 412,457,458 460,461,462 486,800,827 862					
EH.Galaxy			514,858					
EISAT			822					
Elbe	001,171	313						
Electrosat			870					
Elite	108							
Elman	019,029							
Emerson	146,155	286						
EMME ESSE			463,464,465					
Europhon	000,004,019,029 030,146							

CX1120 Code List

Brand/Device	TV/TXT	VCR	SAT/DSS	CABLE	HIFI	CD	LD/VCD/DVD	AUX
Eurosky			421					
Euro Space			850					
Eurostar			465,872					
Fenner	033,193,240							
Fidelity(UK)	003,034,229							
Filmnet	202,248							
Finlux	007,008,009,013 025,026,029,035 094,161,169,221	278	414,415					
Fisher	025,036,155,167 170,255	280,314,315,316			529	546		
Force			836					
Formenti-Phoenix	003,008,025,037 038,159							
Fortec Star			458,808,809 846,850,851 852,853,854 856,857,859 866,867,876 878,879					
Fracarro			380,381					
France Telecom	266							
Freecom			426					
FTE			399					
Fuba			413					
Funai	016,160,253	359						
Funtach			823,824					
Galaxys			873					
GBC	002,004,019,025 026,031,033,039 040,041,042	281						
GEC(UK)		278						
Geloso	004,019,025,032 033,039,149,150	281						
General		358						
Giucar Record			382,416					
GMI				499,515 519,521				
Goldstar	003,004,043,080 153,172,252,700 701	282				633		
Goodmans	119	301						
Gorenje	170,173							
Granada(UK)	002,004,027,041 044,045,046,047 048,049	272,278,283,314 369						
Grundig	003,010,018,020 045,050,051,053 054,056,094	272,275,284,361 369	383,400,402 484					
Haitai						548	648	

CX1120 Code List

Brand/Device	TV/TXT	VCR	SAT/DSS	CABLE	HIFI	CD	LD/VCD/DVD	AUX
Hanseatic	025,027,037,044 052,055,258	278,285						
Hantarex	000							
Hauppaugel	026							
Hemmermann	057							
Hinari	033,044,058,059 060	281,286,287,317 360						
Hirschmann			415					
Hitachi	004,040,041,042 044,047,055,061 062,063,064,065 066,067,068,174 221,222,710	273,281,285,288	483,828,829		530			
Hotel TV	704							
HTS			827					
Hughes			828,829					
Huth			421,479					
HWALIN			816					
Hyper	003,004,033,153 193							
ICX International			417					
IIEC				506,514				
Imperial	019,023,024,145 151,169,170,231	277,289						
Inkei						541		
Inno Hit	000,004,031,043 060,146,175							
INTER (265)	725							
Interfunk	005,027,040,045 046,052,069,070 071,073,075,155	278,290						
Irradio	008,039,043,060 153,262							
IT	723							
ITT-Nokia	005,032,033,040 041,045,049,069 070,071,072,074 076,162,168,176 177	270,273,276,290 291,292,316	384,385,418					
Janco	249,250							
JBL						623 624		
JEBSEE				496				
Jeemon			386					
Jerrold			454	417				
Johansson			387					
JVC	077,119,178,179	270,273,292,318 319,320,321,328				605	664	
JSR			386					
Kaisui	163							
Karcher	159,163,175					549		

CX1120 Code List

Brand/Device	TV/TXT	VCR	SAT/DSS	CABLE	HIFI	CD	LD/VCD/DVD	AUX
Kathrein			388,389,390 419,469					
Kendo	146							
Kennedy	025,078,079							
Kenwood					527,531 532,533 534	550 580	572,630 663	
KOKA				502,505				
KONIG	027							
Korting	037,155,157							
Legend-V							650	
Lenco	033,039,183,238 239,240	325,355	423,426,480 481,482		595,596 597,598 599,600 601	060 549		585,586 587,588 589,590 591,592 593,594 (CD)
Lenoir	004							
LEON				499				
Loewe Opta	052,081,155,156 189,213,242	272,278,369						
Logik	028	287,322,360						
Luma	032,082	322						
Luxor	005,045,047,055 068,083,084,085 086,087,162,177	285,291	384,391,392			528		
Macab			420					
Macom			444					
Magnadyne	000,019,025,029 057,147,149,150 155							
Magnafon	000,003,008,029 030							
Magnasonic		291						
Magnavox			477,830,831			553 576 604	571	
Marantz	026,027	272,278,301						
Maspro			388,393,402 490					
Matsui	004,006,028,041 088,182	287,322,332						
Maximal	058							
Melectronic	255							
Memorex		282,314						
Metz	018,053,089,090 091,155,180,183	272,275,294,369 370	383					
Microsat			874					
MINA			494					
Minerva	010,018,045,051 053	272,275,369	383,400,484					
Mission						553		

CX1120 Code List

Brand/Device	TV/TXT	VCR	SAT/DSS	CABLE	HIFI	CD	LD/VCD/DVD	AUX
Mitsubishi	044,052,092,119 154,155,181,182 707	278,281,293,320 362,751	489				662	
Mivar	000,003,093,094 095,245,259							
MME			217					
Morgans			421					
Multisystem	159							
Multitech	096,170,172	281,325						
Murphy(UK)	041							
NAD		363						
NEC	184	273,313,320	422,478,493			551		
Neckermann	004,026,044,055 082,097,170	270,272,273,278 285,286,369	421					
N.E.I.	166							
Neosat			845					
Network			394					
Noblisko	003,008,029,051 146	272,369						
NOKIA	720		720,807					
Nordmende	065,067,075,098 099,100,101,102 103,104,134,185 186,222	270,273,279,292 295,296,297,318 319,321,323,324 326,327,328,329 330			535,549			
OAK				500				
Obritech			426					
Oceanic(F)	005,040,105,106 107							
Onceas	004							
Onkyo					536,537	613 614 615 616		
Orion	006,016,028,057 088,108,109,187 188,189,253	286,322,331,332 333,360						
Osaki		282						
Otto Versand	025,027,044,052 055	278,285						
Pace			394,395,400 402,485,814 815					
Pael	003,008							
Palcom			396					
Palladium	197	271,356	421					
Palsat			423					
Panasat			819,863					

CX1120 Code List

Brand/Device	TV/TXT	VCR	SAT/DSS	CABLE	HIFI	CD	LD/VCD/DVD	AUX
Panasonic /National	001,003,019,037 040,106,110,111 112,114,190,212 241	274,290,312,354	473,832		538		573,574 629,639	
Pansat			455					
Paragon				806				
Penney		313						
Pentax		288						
Philco	019,023,024,025 151,155,169,170 231							
Philex	229							
Philips	003,026,027,046 073,113,115,155 191,192,193,194 223,266,230,242	278,302,334,335 336,369	402,424,425 477,803,830 831,841			552 553 579 604	559,675	560(EQ) 561(PIP) 562(TAPE) 565(TUNE) 567(DCC)
Phonola	175	278,335						
Pilot (1621Y)		753 (Video2)						
Pilot (1624Y)	729 (PIP)							
Pilot (P1528Y)		752						
Pilot (P1707Y)	721							
Pilot (P3033)	727							
Pilot (P3050)		754						
Pilot (P4005)	726							
Pilot (P567)	728							
Pilot (P716)	724							
Pioneer	000,027,067,243	278,320,334,336 363,364,365	474		545	554 555 610	571,658	
Polestar	214							
Prandoni-Prince	008,032,146							
Praxis	217							
Premier			802					
Primestat			454					
Prosat	001		405,451,479					
Proton						553		
PSR			858					
PYE		320						
Quartz		314						
Quelle	004,005,007,008 009,010,013,026 027,028,045,050 051,052,069,094 153,221,231,232 234,235,236,253	272,275,278,286 298,369	383					
Radiola	242							
Radiotone						549		
Radix			409,428,430 487					
Rank(UK)	022							

CX1120 Code List

Brand/Device	TV/TXT	VCR	SAT/DSS	CABLE	HIFI	CD	LD/VCD/DVD	AUX
RBM(UK)	022,094							
RCA	204,210,211	349	450,818,835				602,661 667	
RC-AK			456					
Rediffusion(UK)	005,041,116							
REX	011,021,032,078 079,118	273,292,319						
RM(RM2200)			860					
Roadstar	039							
ROTEL						553 582 583		584(TAPE)
RTG.(SpaceNet)			846					
SABA	000,065,067,075 085,098,099,100 103,117,155,185 186,222,224	270,273,279,292 295,318,319,321 326,337,338						
SAE						553		
Saisho	004,006,028,088 182,244	286,287,322,332 360						
Sakura			397,398					
Salora	005,047,048,055 066,068,069,076 082,086,097,162 177,195,249,250 267,268	283,285,314	391,418					
Sambers	000,004,008,029 030,043							
Samsung	026,033,043,159 160,170,175,212 215,702,703,716	289	459,475,476 801,877				637,666	
Sansui		320				603		
Sanyo	013,031,044,074 119,120,121,122 123,162,167,170 182,195,205	291,314,316,339			539	604 606		
SAT 100			372,488					
Sateco			426					
Sat.Receiver			514					
Schneider	004,011,015,019 025,036,038,255 258,262	278,281,289						
Scientific Atlanta			452					
Sears		315						
SEG	096	281,289						
Seleco	011,058,078	309						
Senta		277						
SET			825,837,838 839					

CX1120 Code List

Brand/Device	TV/TXT	VCR	SAT/DSS	CABLE	HIFI	CD	LD/VCD/DVD	AUX
Sharp	044,054,119,124 196,198,225,227	301,302,341			531	550 566	628	
Sherwood					540,541 577,578			
Shinton		356						
SHOV	033							
Siarem	000,025,029,155							
Sicatel	001							
Siemens	010,231,232,233 234,236	272,275,291,369	383					
Siesta	254							
Signal			456,850,855					
Silver	160							
Singer	025,029,147,149 155							
Sintrack			427					
Sinudyne	006,016,025,026 029,057,109,125 155,192,197,253	278,287						
Sky Digital			880,881					
Skygiant				511,512				
Skymaster			479					
Sony	028,119,126,127 128,129,130,182 199,228,260,705	298,299,340,342 343,344,367,750	472,834		617	556 557 575 607	575,631 657	563(TAPE) 575(CDV) 618(TUNE)
Star			459,470,802 846,868,871 875					
Stern	078							
Strong			399,423,426 480,492,864 865,868					
STS			393					
STV			413					
Sun Moon Star			813					
Super Max			846,848,849 850					
Supex			858,862,869					
Sylvania						553 604		
TADA				448,523				
Tadiran			817					
Taicom				502				
Tai Wah.	218,219							
Tandberg	180,253,266	322						
Tantec			396					
Tatung	002,004,026,028 031,131	278					659	
Tay Shoen				506,517				

CX1120 Code List

Brand/Device	TV/TXT	VCR	SAT/DSS	CABLE	HIFI	CD	LD/VCD/DVD	AUX
Teac						608 611		
Technics					542	558 609		
Technisat			409,428,429 430,431,487					
Technosat			263,467,802 869					
Technovision	263							
Tedelex			466					
Teknika			471					
Tele +1	248							
Teleavia	186							
Telefunken	067,075,098,132 133,134,135,140 185,186,231,235	270,273,279,292 318,319,321,323 330,345,346,347						
Telemax			432					
Telemeister		359	398,409,428 430,469,487					
Teleservice	203,246							
Tensai	013,016,033,037 039,178							
Thomson	065,067,075,078 098,100,103,185 186,222,722	270,273,279,292 318,323,324,328				668		
Thorn-Ferguson	001,135,136,137 140,144,148,152 160,186,229,256	270,273,300,303 304,305,306,308 319,329,330,348 368	394,395,400 401,402,433 485					
TMK		286						
Toshiba	022,044,094,119 138,139,141,142	273,292,307	442,444,833	522		571,640		
TPS			805					
Trans				497,518 520				
Uher	011,012,036,037 038,078,255	273,289						
Ultravox	003,025,082,096 146,155	276						
Unbranded			481					
Uniden			403,404,406 443,830,831					
United Satellite			440					
Universum	094,160,221							
Univox	001							
US Electronics			417					
Vector		313	430,487					
Vegavox	169							
Victor		318,328,366				605		
Video		313						
Videocon	033,138,141,715							

CX1120 Code List

Brand/Device	TV/TXT	VCR	SAT/DSS	CABLE	HIFI	CD	LD/VCD/DVD	AUX
Viewstar			477					
Vortec			459,801,855					
Vortic Star			801					
Voxson	032,155							
Vtech			434					
Watson	037							
Watt Radio	001,003,025,029 030,057							
Wega Color	119,143							
White Westinghouse	003,037,159	276,282						
Winer			080,387,449 844	501				
WISI			409,420,435 436,437,438 439					
WISO				503,504				
Xenon		322						
Yamaha					543,544	612		
Yoko	004,159							
Zanussi	078							
Zehnder			390					
Zenith	203,237		441,444,445 446,447			570		
Zinwell			821					
Others	206,207,208,264 265	350,351,352,353	820,861				674	625 (A-B Switch)
山星							627	
日声							627	
天乐							643	
北京(BEIJING)	706,711							
步步高 (BBK)							654	
金格(Gynco)							646	
牡丹	160							
长虹(Chang Hong)	141,175,711,717 718,719						649	
长城	711							
奇声三碟							627,634	
松日	711							
松立(Solive)							641	
东大	711							
东宝	711							
东华	711							
佳丽彩	709,711							
皇牌(TCL)							632	
美多							627	
美视	708							
凌骏							644,655	
新格(Shinco)							647	

CX1120 Code List

Brand/Device	TV/TXT	VCR	SAT/DSS	CABLE	HIFI	CD	LD/VCD/DVD	AUX
麦科特 (MKT)							651	
海信	033							
海虹	711							
神彩	711							
康力	711							
康佳(KONKA)	706,712,714							
康艺	708							
蚬华(SMC)							636	
厦星 (Xiaxing)							652	
爱多 (IDALL)							635,653	
银河 (Yinhe)							656	
熊猫(PANDA)	706						645	
乐华	706							
摩登	708							
声王三碟							638	
环宇	175,706							
莺歌	711							